

 
3.1101.617010.0000000

原材料 机乐堂 JR-W030 20W 磁吸指环支架无线充移动电源6000mAh 说明书 V1.0

尺寸: 60x80mm

材质: 128g铜版纸+正反单色印刷+风琴折

JOYROOM

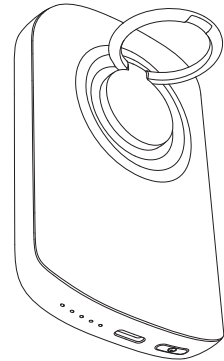


User Manual

Wireless Power Bank with Ring Holder 6000mAh

Product introduction

The product is a 20W power bank with ring holder. It supports both wired and wireless charging, and can charge 2 devices simultaneously. It provides charging for mobile phones, tablets, e-book readers, watches, game consoles, etc. It supports PD3.0, QC3.0, AFC fast charge protocols. It is compatible with 5W, 7.5W, 10W, 15W magnetic charging. With NS2H ultra-strong magnets, it holds the phone securely and ensures continuous charging. The LED indicators let you know the remaining power in real time. The product has a built-in smart chip and a variety of safety protections such as over-charge, over-discharge, over-voltage and over-temperature protection, etc.

 Product diagram

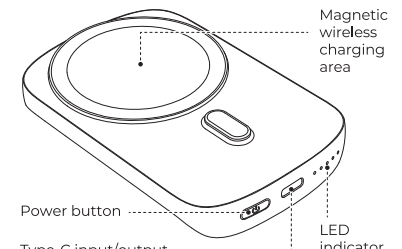

Magnetic wireless charging area

Power button

Type-C input/output

LED indicator

Parameters

Model	JR-W030
Battery Capacity	6000mAh 3.85V (23.1Wh)
Rated Capacity	3400mAh (5V \Rightarrow 2.4A)
Energy conversion rate	\geq 78%
Type-C Input	5V \Rightarrow 2.4A 9V \Rightarrow 2A 12V \Rightarrow 1.5A
Type-C Output	5V \Rightarrow 2.4A 9V \Rightarrow 2.22A 12V \Rightarrow 1.67A
Wireless Charging Output	5W/7.5W/10W/15W
Multi-port Output	5V \Rightarrow 3A (MAX)
Material	PC+ABS fireproof material
Size	99.5*64.5*20mm
Net Weight	138g

Packing list

- Power bank x1
- Charging Cable x1
- Manual & Warranty card x1

Operation instructions

1. Power on

 
- Press the button once to power it on.
- Connect device to have it automatically power on.

2. LED light

- In turned on status, you can check the remaining power capacity.
 - 100% ●●●●
 - 75% ●●●○
 - 50% ●●○●
 - 25% ●○●○
- If no device is connected in 30s, the product will enter sleep mode and the LED light will turn off automatically.

3. Wireless charging tips

Place your mobile phone that supports wireless charging in the wireless charging area of the product (as shown in the figure below) for accurate alignment, it will enter wireless charging status instantly.

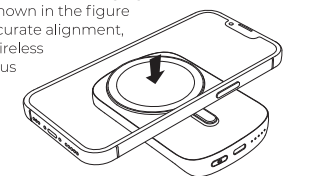

4. Charging indicator instructions

LED indicator	Indicator Status	Product Status
Wired charging indicator	Constant white light	Standby
Wireless charging indicator	Constant white light	Wired charging status
Wireless charging indicator	Constant ice blue light	Wireless charging status
Wireless charging indicator	Flashing green light	Abnormality detected

Wireless charging precautions

- This wireless power bank is not compatible with non-MagSafe phone cases, such as Otterbox Defender cases.
- Do not use an adapter with an output of 5V \Rightarrow 1A (5W) or less.

5. Using environment

Using ambient temperature: 0°C to 40°C, non-tropical area
Storage ambient temperature: 0°C to 40°C

6. Recharge the power bank

Use the USB to Type-C cable to connect the Type-C port of the power bank with the charger. The LED light keeps flashing which means the power bank is being recharged. When it is fully recharged, the LED light will stop flashing and be constant on.

Not: please recharge the product with a charging cable and charger of nominal specifications.

Warm reminders

- Please fully charge the power bank when using it for the first time.
- Please pull out the charging cable in time after fully charged to avoid energy loss.
- Please use suitable cables and accessories to make the power bank function normally.
- Do not drop, impact, disassemble the product or try to repair it by yourself.
- Do not store the product in a wet place or immerse it in water.
- Do not expose or store the product near a heat source or flammable materials.
- Do not leave this product in the car. The high temperature of sunlight will damage the product.
- Please keep it out of the reach of children to avoid improper use.
- Do not put any foreign object into the USB/Type-C input/output ports of the product to avoid short circuit or damage.
- Please charge the power bank fully at least once every four months to prolong its service life.
- Please stop using the product in case of swelling, leakage, deformation of battery and other abnormalities.
- Do not disassemble the product by yourself. Any shortened service life or damage caused by improper use or storage of the product by customer will not be borne by our company.
- Avoid using chargers with excessive output current or load.

After-sale service regulations:

- Consulting service: Please read the User Manual carefully before using the product and keep it for future use.
- Replacement service: The company undertakes that if there is product failure within 7 days from the date of purchase that is not caused by human error, the customer can choose between replacement and repair freely (if the appearance is in good condition, it will be repaired) provided that the product, its accessories and packaging are complete and in good condition. The customer can ask the local authorized dealer to deal with it.
- Warranty service: In case of product failure within the warranty period that is not caused by human error, free warranty service will be provided within one year. In case of product failure caused by human error, we will charge for relevant repairing.
- Charged repairing service: In case of product failure within one to three years from the date of purchase, charged repairing service will be provided. Users need to pay for the components, transportation and labor costs.

5. Warranty exceptions (you need to pay for relevant service):

- Expired the warranty period;
- There's alteration on the Warranty Card, or the serial number is inconsistent with the product itself;
- Product damage caused by accidents or human error


(e.g.: customer fails to use, maintain and store the product according to the User Manual; incorrect installation, improper power supply, water intrusion, etc.)

- Failure to provide Warranty Card and valid invoice (except that you can prove that the product is within the warranty period).
- Product damage caused by force majeure, such as earthquake, fire disaster, flood, thunderstroke, etc.
- Product damage caused by disassembling, repairing or refitting the product without authorization.

Warranty Card

No.:	
Date of purchase:	
Customer:	
Dealer:	
Name:	Telephone:
Address:	
Batch number:	

 JOYROOM

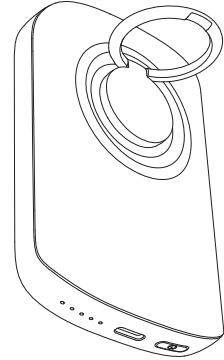


使用说明书

指环支架无线充移动电源6000mAh

产品说明

本产品是一款20W指环支架移动电源,有线充和无线充二合一充电功能,满足两台设备同时充电,可为手机、平板、电子书、手表、游戏机等设备充电,兼容多种快充协议,支持PD3.0、QC3.0、AFC快充等协议,兼容5W 7.5W 10W 15W磁吸无线充,NS2H超强磁力,强力吸附不掉落不断充,自带LED灯显,实时显示剩余电量,本产品内置智能芯片,具有过充、过放、过压、温度保护等多种安全保护电路。

 产品介绍

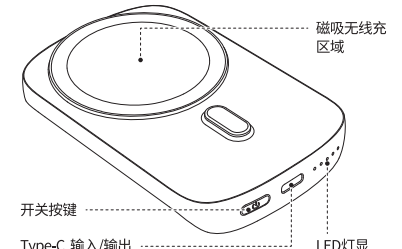

磁吸无线充电区域

开关按键

Type-C 输入/输出

LED灯显

产品规格

型号	JR-W030
电池容量	6000mAh 3.85V (23.1Wh)
额定容量	3400mAh (5V \Rightarrow 2.4A)
能量转换率	\geq 78%
Type-C输入	5V \Rightarrow 2.4A 9V \Rightarrow 2A 12V \Rightarrow 1.5A
Type-C输出	5V \Rightarrow 2.4A 9V \Rightarrow 2.22A 12V \Rightarrow 1.67A
无线充输出	5W/7.5W/10W/15W
多路输出	5V \Rightarrow 3A (MAX)
产品材质	PC+ABS 防火料
产品尺寸	99.5*64.5*20mm
产品净重	138g

包装清单

- 移动电源 x1
- 充电线 x1
- 说明书/保修卡 x1

使用说明

1. 开机说明

 
- 按键一次,即可开机。
- 接入设备,自动开机。

2. 灯显说明

- 开机状态下,可查看电源剩余电量。
 - 100% ●●●●
 - 75% ●●●○
 - 50% ●●○●
 - 25% ●○●○
- 若30秒无设备接入,进入休眠状态,LED灯显自动熄灭。

3. 无线充电说明

将支持无线充手机放置在本产品无线充电区域(无线充电线圈发射区域如图所示)精准对位,可进入无线充电状态。

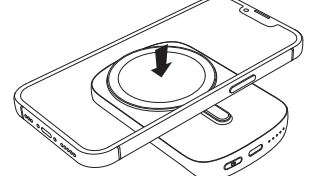

4. 无线充灯显说明

LED指示灯	灯显状态	设备状态
有线充电指示灯	白灯常亮	待机状态
无线充电指示灯	白灯常亮	有线充电状态
无线充电指示灯	冰蓝灯常亮	无线充电状态
无线充电指示灯	冰蓝灯闪烁	检测到异常

无线充电注意事项

- 此无线充设备不兼容非MagSafe手机壳,如Otterbox Defender手机壳。
- 请勿使用输出为5V \Rightarrow 1A (5W)或以下的适配器。

5. 使用环境

使用环境温度: 0°C至40°C非热带地区。
储存环境: 0°C至40°C。

6. 产品充电

使用充电器连接USB TO Type-C的数据线,插入本移动电源Type-C端口,LED灯显闪烁常亮,表示正在为移动电源充电,充满电后LED灯显停止闪烁,LED灯显常亮。

注意:请选择符合产品标准规格的充电线和充电器为产品进行充电。

温馨提示

- 第一次使用本产品请将电量完全充满。
- 本产品充电完成后,请及时拔掉充电线,避免损耗。
- 为保证产品的正常使用,请务必使用正确的线材和配件。
- 严禁摔打、撞击、拆卸或尝试自行修复此产品。
- 请勿将移动电源放置在潮湿处及用水浸泡此产品。
- 严禁将此产品放置在热源易燃处。
- 请勿将此产品遗放在汽车中,阳光照射的高温会导致此产品损坏。
- 请将移动电源放置在儿童无法拿取的地方,避免儿童不当使用。
- 勿将任何异物插入产品USB/Type-c输入输出口孔位,以免造成短路或损坏。
- 为避免长时间搁置损耗使用寿命,请至少每四个月对移动电源充一次完整的电。
- 如出现电池膨胀、漏液、变形等异常时,请停止使用。
- 请勿自行拆机,不正确操作会导致本产品寿命降低或损坏,因此带来的影响不属于保修责任或厂家责任,敬请谅解。
- 避免使用超出本产品输出电流的充电器或负载。

产品中有害物质的名称及含量

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电芯	X	○	○	○	○	○
PCB板	X	○	○	○	○	○

本表格依据SJ/T11364的规定编制

○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572标准规定的限量要求以下。

X:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求,且目前业界没有成熟的替代方案,符合欧盟RoHS指令环保要求。

售后服务条例:

- 咨询服务: 用户在使用产品前,请仔细阅读本产品的使用说明书。
- 包换服务: 包换期内(自购机之日起七日内),正常使用出现了非人为故障,请保持产品,配件和包装的完整(若外观不损坏、做保修处理)经检查确认故障后,可选择换货或维修,用户可到当地授权经销商处联系并处理。
- 保修服务: 保修期内,正常使用出现的非人为故障,均可享受免费保修服务(主机一年内免费保修,若人为损坏,做收费维修服务)。

4. 收费维修服务: 产品自购机之日起一年到三年内,出现故障可收费维修,用户需支付维修所产生的元器件费、运输费及人工费。

5. 以下情况不在三包范围内, 本公司提供有假服务

- 超过三包期限。
- 涂改三包凭证,或序列号与产品本身不符。
- 意外因素或人为导致的产品损坏(如:未按使用说明书操作、维护或保管、安装错误造成的故障,接入不合适的电源、进水、掉坏等)。
- 无效三包凭证和有效发票(能证明产品确属服务期内者除外)。
- 因不可抗力如地震、火灾、水灾、雷击等导致的产品故障或损坏
- 未经本公司许可,自拆卸、修理或改装。

产品保修卡

型号:	
购买日期:	
用户:	
购买商号:	
姓名:	电话:
地址:	
生产批号:	