



JOYROOM

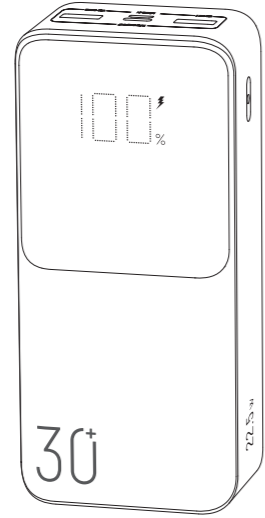

User Manual
22.5W Fast Charging power bank-3000mAh

Product introduction
The portable power bank is equipped with two input ports and three output ports. It provides fast charging for phones, tablets, e-readers, watches, game consoles, and more. It features a large digital display. The PD3.0, QC3.0, Samsung AFC, and Huawei SCP, FCP, PC fast charge protocols are supported. The built-in smart chip provides multiple protection for the product and your device, including over-charge protection, over-discharge protection, over-voltage protection and over-temperature protection etc.

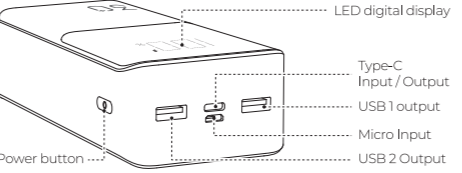

Specification

Model	JR-QP193
Lithium polymer battery capacity	3000mAh 3.7V (111Wh)
Energy conversion rate	≥80%
Rated capacity	1800mAh (5V=3A)
Type-C input	5V=3A 9V=2A 12V=1.5A
Micro input	5V=2A 9V=2A 12V=1.5A
Type-C output	5V=3A 9V=2.2A 12V=1.67A
USB/USB2 output	4.5V=5A 5V=4.5A 9V=2A 12V=1.5A
USB + Type-C total output	5V=3A
Net weight	628g
Material	ABS + fireproof PC
Size	150*69*41mm

Packing list
Power bank x1
Charging cable x1
Manual & Warranty card x1

Instructions
1. Turn on:
Press the power button once to turn on the power bank.
2. Sleep mode:
In turned on status, if no device is connected to the power bank, it will enter sleep mode automatically in 30s or you can press the power button twice to have it enter sleep mode.
3. Recharge the power bank
Use the USB to Type-C/Micro charging cable to connect the Type-C/ Micro input of the power bank with the charger. The digital display starts to show current power which changes with the recharging process. When it is fully recharged, the display will stop at "100".
4. Discharge the power bank
① Charging mobile phones or other digital devices
Use the original charging cable of your digital device to connect it to the Type-C or USB/2 port of the power bank, after connecting successfully, the power bank will be activated to charge your device and the power capacity of power bank will be displayed.
② Fast charging supported devices
When using this product to fast charge a digital device that meets the fast charging protocols for the first time, the power bank will be activated with the connecting of device in 1-2 seconds.
Notes:
• When using the power bank to charge a digital device, a lightning symbol will be displayed in 1-2s, which means it enters fast charging mode.

When using the power bank to charge two devices simultaneously, its fast charging function will be turned off automatically to protect your devices, and it only supports normal 5V=3A charging.
Fast charging will be activated only when the fast charging protocol of the device is compatible with that of the power bank. Otherwise, normal 5V=3A charging will be provided.
③ Discharge display
The displayed digits will decrease with the discharging process. Please recharge the product in time when the power is less than 10%.
Recharging the power bank:
When the power bank is connected to a compatible charging cable, its LED display will light up and show the current power percentage, which means recharging started. If the LED display does not light up, it means the recharging failed, please check the connection of charging cable.

Warm prompt
1. Please fully charge the power bank when using it for the first time.
2. Please pull out the charging cable in time after fully charged to avoid energy loss.
3. Please use suitable cables and accessories to make the power bank function normally.
4. Do not drop, impact, disassemble the product or try to repair it by yourself.
5. Do not store the product in a wet place or immerse it in water.
6. Do not expose or store the product near a heat source or flammable materials.
7. Do not leave this product in the car. The high temperature of sunlight will damage the product.
8. Please keep it out of the reach of children to avoid improper use.
9. Do not put any foreign object into the USB input/output ports of the product to avoid short circuit or damage.
10. Please charge the power bank fully at least once every four months to prolong its service life.
11. Please stop using the product in case of swelling, leakage, deformation of battery and other abnormalities.


12. Do not disassemble the product by yourself. Any shortened service life or damage caused by improper use or storage of the product by customer will not be borne by our company.
13. Avoid using chargers with excessive output current or load.

Instruction of after-sale services
1. Consulting services: Please read through this user manual before using the product and keep the manual for future use.
2. Guarantee replacement: the company undertakes that if there is any quality problem within 7 days from the date of sale, the customer can choose to return the product for replacement and provide maintenance service for you (Provide the appearance is in good condition). But please keep the product, accessories and package in good condition.
3. Warranty service: if there is quality problem caused by impersonal factors in warranty period, we can provide free maintenance service for you (one-year free warranty service only, or we will charge it for repairing caused by human damage).
4. Maintenance bill: if there is quality problem caused by personal factors within one to three years from the date of purchase, it can be charged for maintenance service. Users need to pay for the components, transportation and labor costs if they need repair.
5. Warranty exceptions (Paid service items):
① Exceed the warranty service time.
② Alter the warranty certificate, or the serial number is inconsistent with the product itself.
③ Product damage caused by accidental factors or human factors (e.g. failure to operate, maintain or keep the product according to the user's manual, failure caused by incorrect installation, install the inappropriate power supply, water intrusion, damage, etc.).
④ No valid warrant and invoice (except those that can prove that the product is within the service period).
⑤ Caused by force majeure, such as earthquake, fire, flood, lightning strike, etc.
⑥ Damage caused by dismantling, repairing, refitting by others without permission.

Warranty Card


No.:	
Date of purchase:	
Customer:	
Dealer:	
Name:	Address:
Telephone:	
Batch number:	

JOYROOM

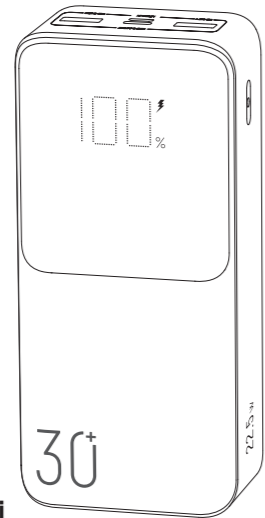

Instrukcja obsługi
22.5W Szybko ładujący Powerbank 3000mAh

Opis produktu
Przenośny powerbank jest wyposażony w dwa porty wejścia i trzy porty wyjścia. Zapewnia szybkie ładowanie dla wielu urządzeń. Powerbank posiada wbudowany wyświetlacz. Produkt posiada wsparcie dla protokołów ładowania: PD3.0, QC3.0, Samsung AFC, Huawei SCP, FCP. Wbudowane zabezpieczenia chronią sprzęt przed możliwymi uszkodzeniami.

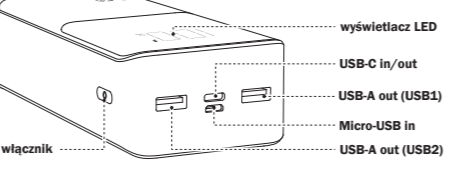

Specyfikacja

Model	JR-QP193
Bateria LiPo	3000mAh 3.7V (111Wh)
Konwersja	≥80%
Pojemność	1800mAh (5V=3A)
USB-C in	5V=3A 9V=2A 12V=1.5A
Micro-USB in	5V=2A 9V=2A 12V=1.5A
USB-C out	5V=3A 9V=2.2A 12V=1.67A
USB1/USB2 out	4.5V=5A 5V=4.5A 9V=2A 12V=1.5A
USB-A+USB-C out	5V=3A
Waga	628g
Material	ABS+PC
Wymiary	150*69*41mm

Zawartość zestawu
Powerbank
Kabel zasilający
Instrukcja obsługi

Instrukcje użytkowania
1. Włączanie
Naciśnij przycisk "włącznik", żeby uruchomić powerbank.
2. Tryb czuwania
Powerbank przechodzi w tryb czuwania automatycznie po 30s bezczynności lub po dwukrotnym wciśnięciu przycisku zasilania.
3. Ładowanie powerbanka
Użyj kabla USB do USB-C in/ Micro-USB in i podłącz do ładowarki. Wyświetlacz będzie pokazywać stan od 0 do 100% (w pełni naładowany).
4. Ładowanie urządzeń z powerbanka
a) ładowanie telefonów i innych urządzeń - podłącz kabel ładujący do powerbanka i urządzenia. Jeśli wszystko będzie poprawnie wykonane wyświetlacz będzie pokazywać obecny stan ładowania.
b) wsparcie protokołów ładowania - powerbank w ciągu 1-2s od rozpoczęcia ładowania uruchamia wybrany protokół współpracujący z urządzeniem. Wtedy na wyświetlaczu pojawi się symbol "błyskawicy".

Uwagi:
W trakcie ładowania dwóch urządzeń jednocześnie funkcja szybkiego ładowania nie jest dostępna ze względów bezpieczeństwa.
Urządzenia ładowane są standardowo prądem 5V/3A. Tylko urządzenia ze wsparciem będą otrzymywać wyższe wartości prądu podczas ładowania.
Powerbank należy naładować kiedy jego energia spadnie poniżej 10%.
Wyświetlacz LED powerbanka będzie się podświetlał podczas każdego procesu ładowania. Jeśli tak się nie stanie, to należy sprawdzić, czy kabel nie został naruszony lub występują inne problemy techniczne.

Warunki użytkowania
1. Naładuj powerbank do 100% przed pierwszym użyciem.
2. Kabel ładujący należy odłączyć niezwłocznie po ukończeniu każdego procesu ładowania.
3. Używaj odpowiednich kabli, by uniknąć uszkodzenia powerbanka.
4. Unikaj rzucań, uderzenia, rozkręcania i naprawy w własną rękę.
5. Nie przechowuj powerbanka w warunkach o dużej wilgotności lub w miejscach o bezpośrednim kontakcie z wodą.
6. Nie przechowuj powerbanka blisko źródeł ciepła lub ognia.
7. Nie zostawiaj powerbanka w aucie narażając go na bezpośredni kontakt ze słońcem i wysoką temperaturą.
8. Powerbank przechowuj z dala od dzieci.
9. Nie należy wkładać w porty USB innych przedmiotów niż kable.
10. Powerbank należy ładować raz na cztery miesiące.

11. Należy przerwać użytkowanie produktu jeśli pojawi się wyciek lub deformacja obudowy.
12. Fizyczna ingerencja w podzespoły powerbanka i wszelkie naprawy na własną rękę są zabronione. Producent nie ponosi odpowiedzialności za wyrządzone szkody lub uszkodzeń na zdrowiu.
13. Używaj odpowiednich ładowarek o odpowiednich parametrach odpowiadającym specyfikacji technicznej powerbanka.

Instrukcja serwisowania posprzedażowego
1. Konsultuj się zgodnie z informacjami zawartymi w Instrukcji.
2. Gwarancja wymiany obowiązuje do 7 dni od daty zakupu, jeśli zostaną zauważone wady produkcyjne. Produkt musi być kompletny wraz ze wszystkimi akcesoriami i nie może nosić śladów użytkowania.
3. Jeśli wystąpią problemy techniczne lub nieprzewidziane działanie, niespowodowane przez użytkownika, w trakcie okresu gwarancyjnego producent może podjąć się naprawy produktu.
4. Jeśli w ciągu trzech lat od zakupu wystąpią problemy z jakością wywołane przez eksploatację produktu, to kupujący zostanie obciążony wszelkimi kosztami za ekspertyzę, naprawę, transport uszkodzonego powerbanka.
Wyjątki wykluczające naprawę gwarancyjną (Płatny serwis)
1. Przekroczony czas okresu gwarancyjnego.
2. Zamienione numery seryjne produktu. Brak zgodnych numerów na powerbanku, pudełku, karcie gwarancyjnej.
3. Uszkodzenie produktu przez czynnik ludzki.
4. Brak ważnej gwarancji.
5. Uszkodzenia wywołane przez kłeski żywiołowe.
6. Uszkodzenia wywołane naprawami na własną rękę.

Karta gwarancyjna

Numer:	
Data zakupu:	
Klient:	
Sprzedawca:	
Imię i nazwisko:	Adres:
Telefon:	
Numer partii:	